

G3-5D Gimbal with CANON EOS70D and EFS18~135mm lens

G3-5D Gimbal with CANON EOS70D



EFS18~135mm lens



Right side



Left side



Lens with anti-shake function



Right rear



Left rear



Modified shutter cable



Lower mount plate



Lower mount plate and battery Mount



Y-Axis (Tilt) balance adjustment



Symmetry with the other side



Adjust the screw to balance the Y-Axis (Tilt)



The other side of the Y-Axis (Tilt) screw



Locking position for the hot shoe cover



Locking position for the hot shoe Housing



Locking the camera mounting screw



X-Axis (Roll) balance adjustment





## Z-Axis (Yaw) balance adjustment



## Parameter

