

## G3-5D Gimbal with SONY A65

G3-5D with SONY A65 using 18~55 SAM II Lens

18-55 SAM2 lens



SONY A65 position



G3-5D with SONY A65



Camera position after CG adjust



Right rear



Left rear



Elevate lower mount plate about 5mm.



Elevate camera position




Use rubber sheet



Lens is set in the center of the mount plate after elevated.



Fore-and-aft adjustment screw

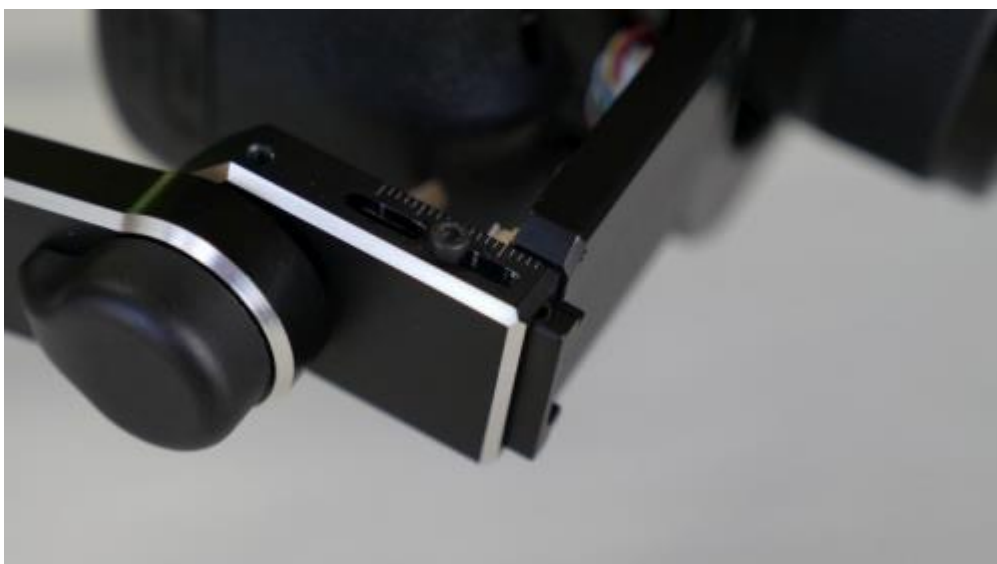



Level of CG screw adjustment.



Both sides of the position should be the same.



Use lengthen stainless socket screw



If use GH gimbal mount plate, the battery can be removed directly.



Pan-Axis (Z) balance adjustment



Use manual focus and adjust focal length on your dSLR lens before adjust the CG position.



Use manual focus on camera.



After setting focal length, the lens won't affect the CG position when it focus.

