

DV Update Step

● Save DV update files in your SD card

步驟一：從官網下載 1830 DV update 更新壓縮檔

Step 1 : Download 1830 DV update.zip file.



 
步驟二：點擊壓縮檔兩下，將 sd_update_file 資料夾解壓縮到您要的位置(例:桌面)

Step 2: Click twice on zip file icon, then decompress the zip file.





步驟三：sd_update_file 資料夾內會有 stkarmfw.bin、stkarmfw、stkarmfw.srb 三個更新檔案

Step 3: There are stkarmfw.bin, stkarmfw.dat, and stkarmfw.srb files in sd_update_file folder.

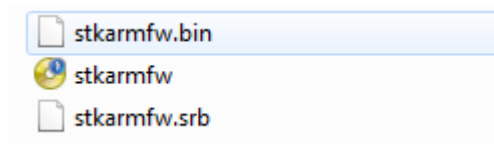

步驟四:將 stkarmfw.bin、stkarmfw、stkarmfw.srb 三個更新檔案複製到您的 SD 卡內，更新檔需在最外層，不可放在資料夾內，避免更新時找不到位置

  Step 3: Copy these three files - stkarmfw.bin, stkarmfw.dat, and stkarmfw.srb in your SD card. Make sure not to save these three files in any folder, to help process these files easily when updating.

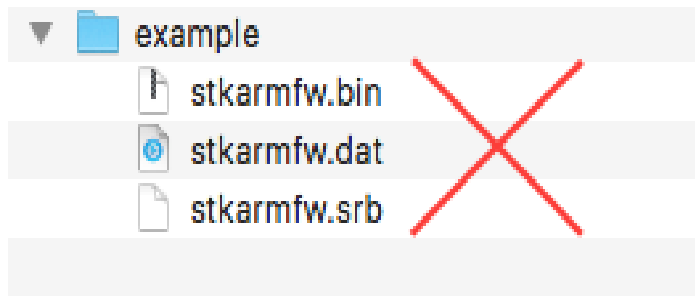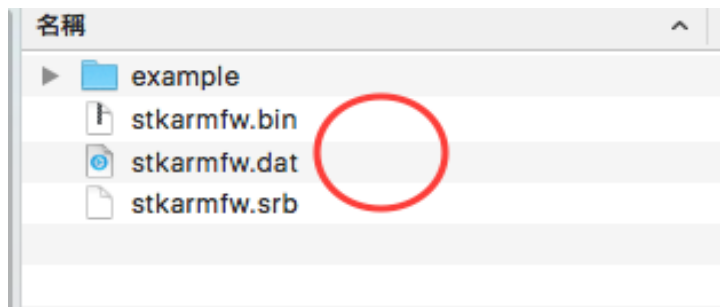

● **Start updating DV via SD card**

 
 
步驟一：開啟您的 MR25 電源

Step 1 : Power up your MR25



步驟二：把相機關閉

Step 2: Power off the DV.

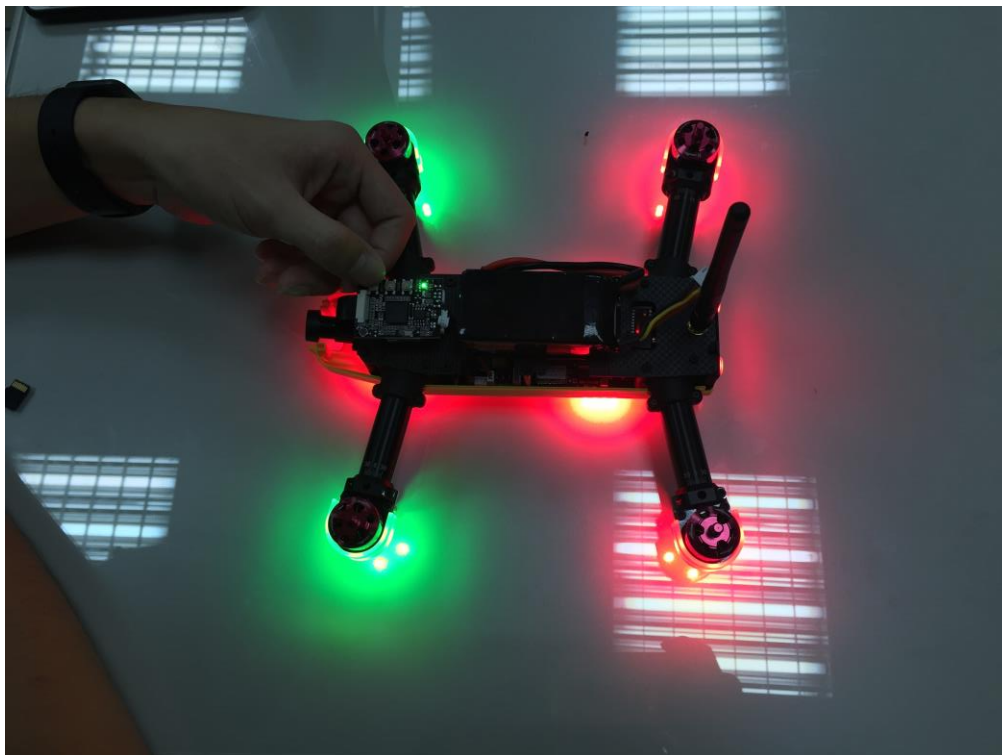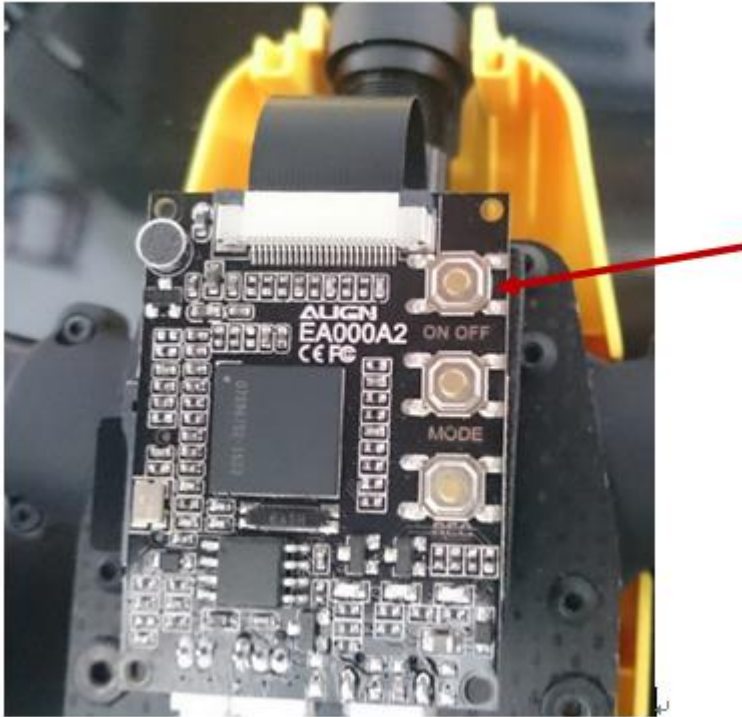


步驟三：將相機 2 Pin 的接頭拔起

Step 3: Remove DV 2-pin cable.




步驟四：插入 SD 卡

 Step 4: Insert SD memory card.

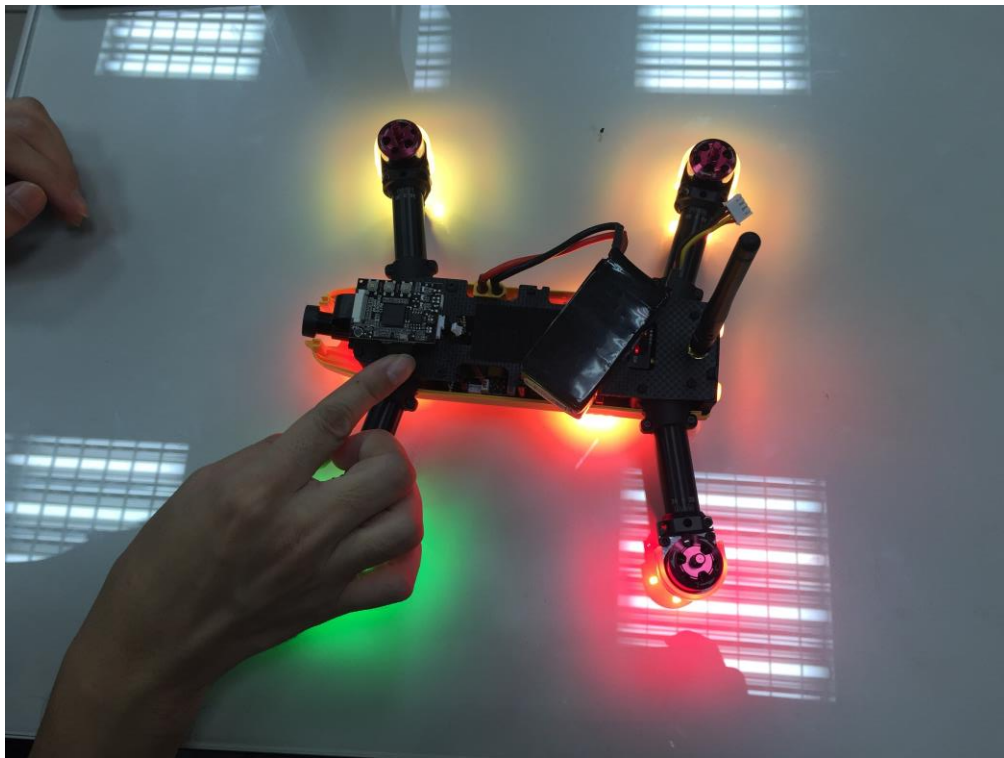

步驟五：兩指同時按著 1 與 3 鈕，長按數秒

 Step 5: Press the first and third button for few seconds.

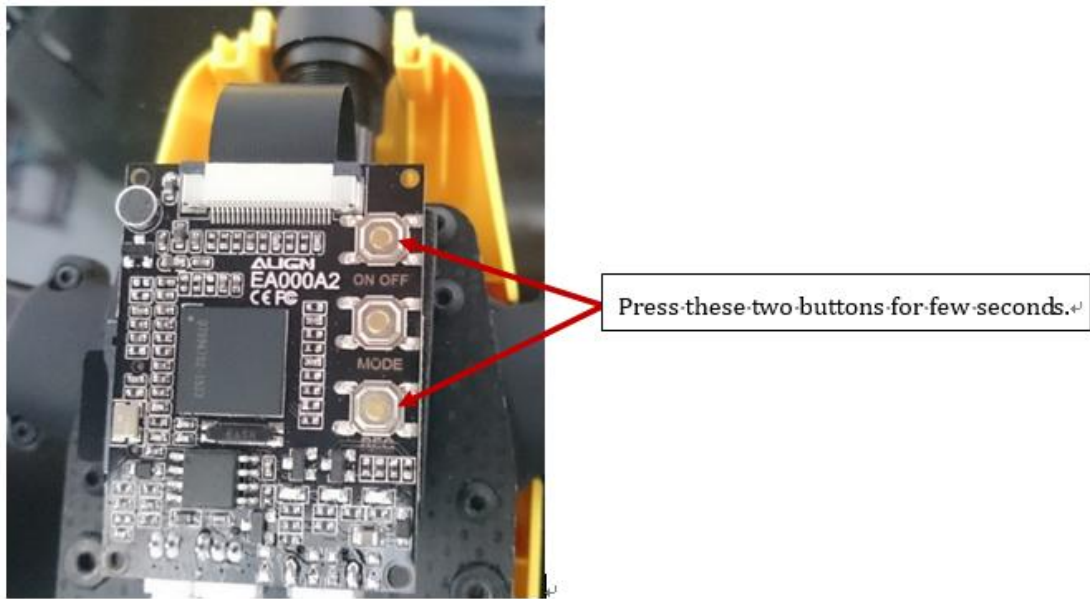

步驟六：相機開機後亮起藍光表示相機已經開始更新，此時兩指可放開

Step 6: Until DV main board led blue light, it means the camera start updating, then you can release your fingers off the buttons.



步驟七：更新完成後相機會自行關機（此為正常現象）

Step 7: After DV system updating, camera will power-off automatically. (It's normal condition.)



步驟八：關閉您的 MR25，之後把相機 2 Pin 的接頭安裝回去

Step 8: Power off your MR25, then re-plug your DV 2-pin cable back.

步驟九：完成後再將您 MR25 重新開機

Step 9: After re-plug the cable back, then you can re-power on MR25.

步驟十：完成更新後，請將 SD 卡中 stkarmfw.bin, stkarmfw.dat, and stkarmfw.srb 三個更新檔案移除。

Step 10: Please remove these three files stkarmfw.bin, stkarmfw.dat, and stkarmfw.srb from your SD card after update completion.